



■ BOTI SR

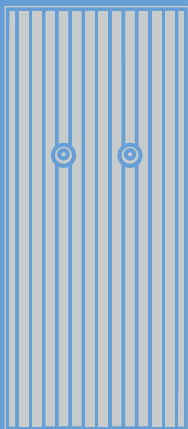


■ BOTE SR

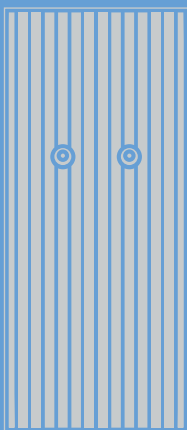

Quick Installation Guide

blueCompact






BOTI SR =




BOTE SR =



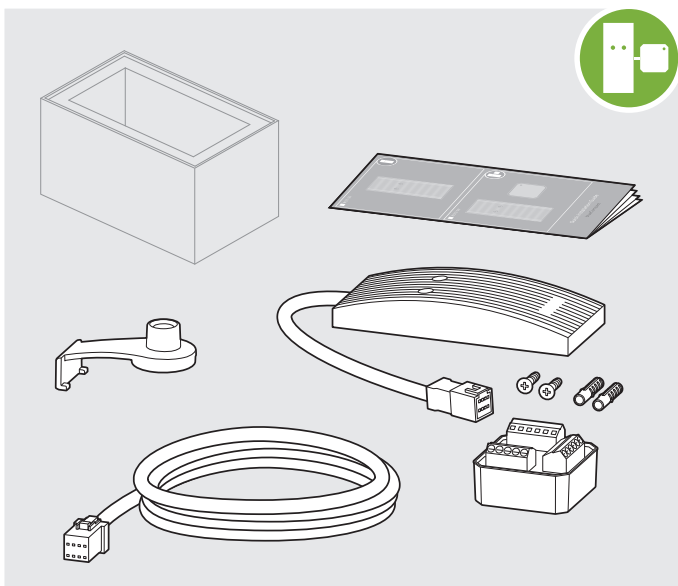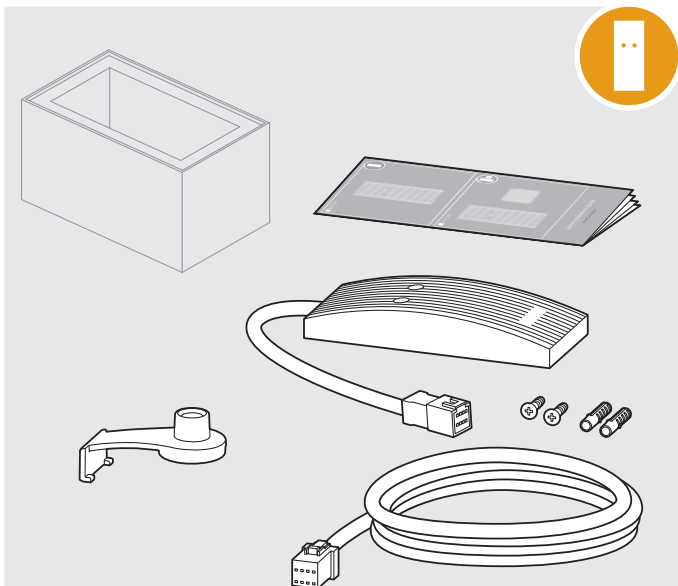

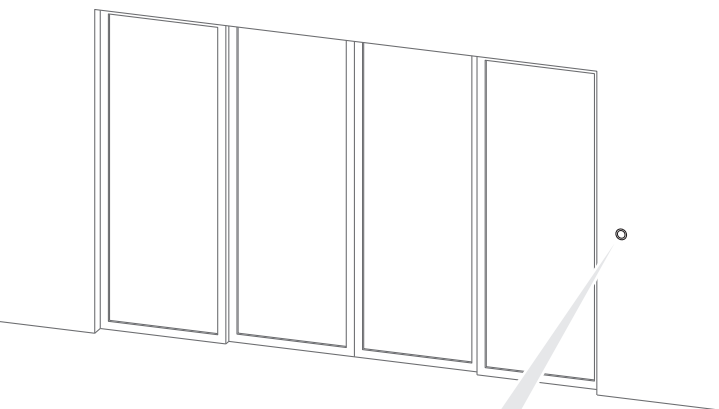


1

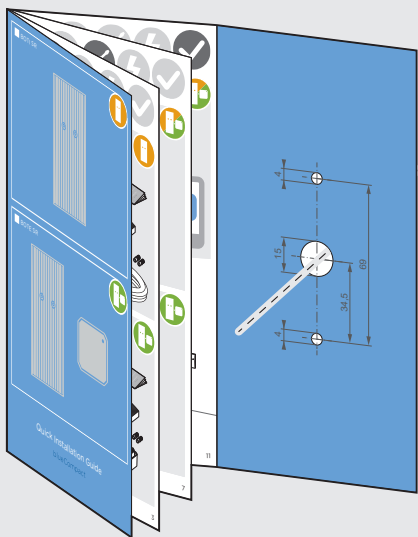





2

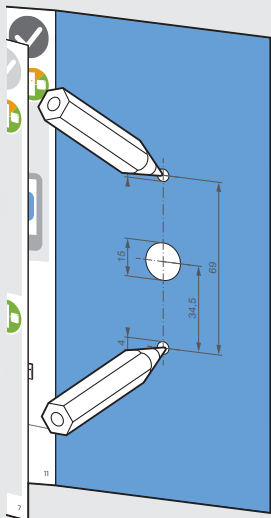




Ø 4 mm

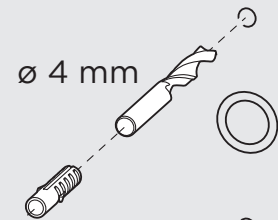

Ø 4 mm



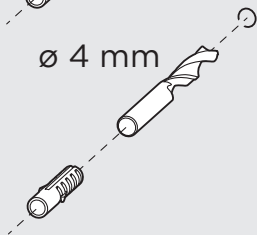


3

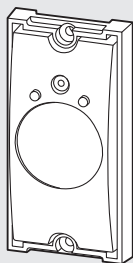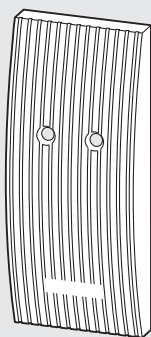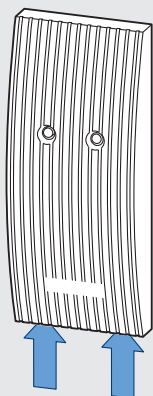




4

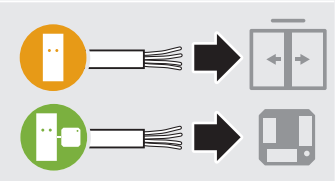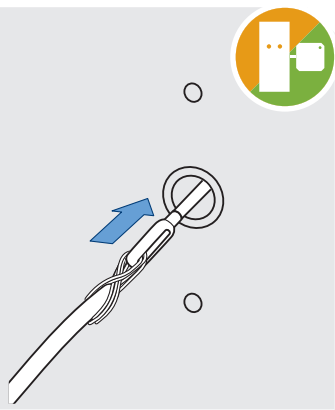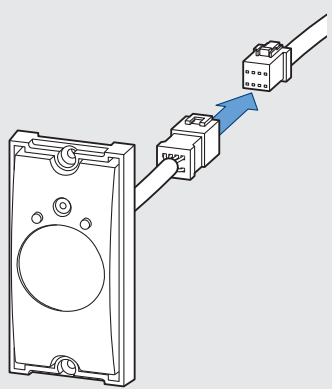



5

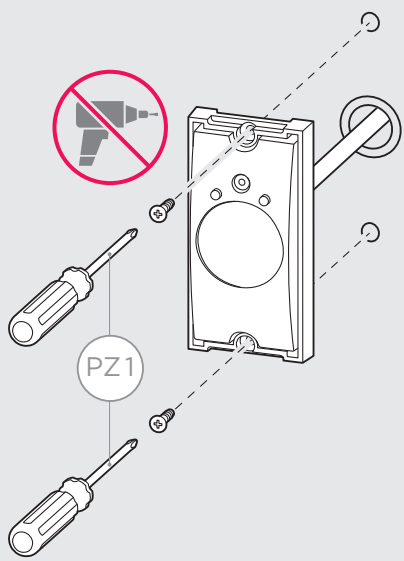



6







6

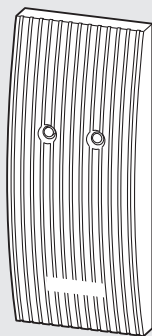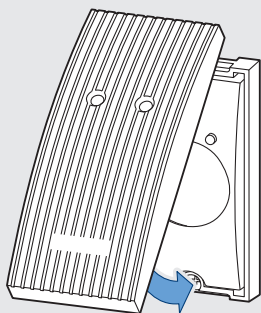


7

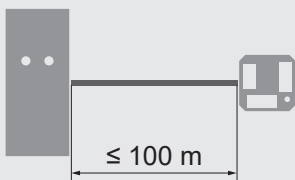
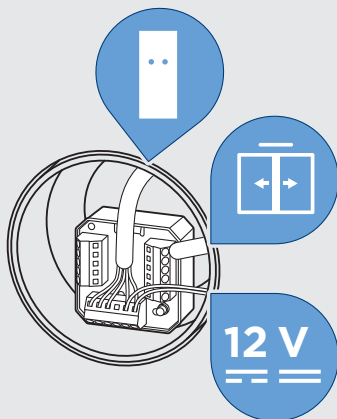


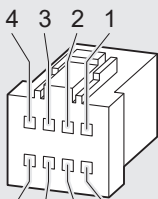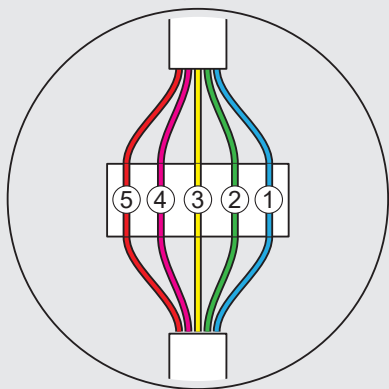




8 7 6 5
1 2 3 4

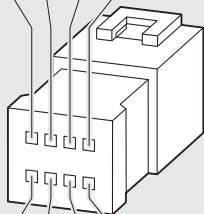


5 6 7 8

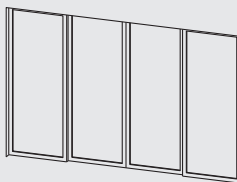
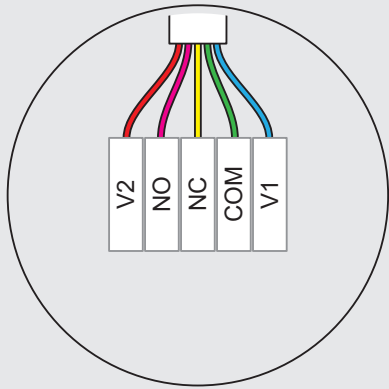


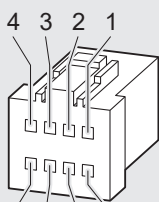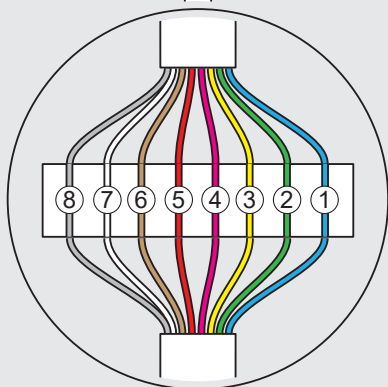


8 7 6 5
1 2 3 4

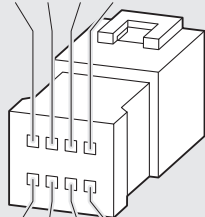

5 6 7 8

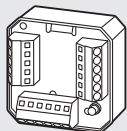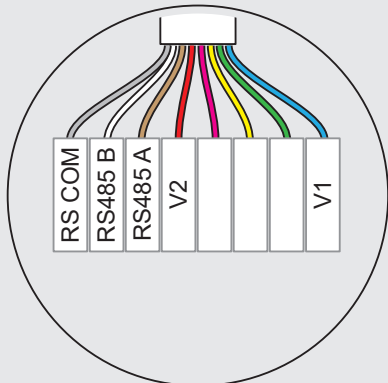

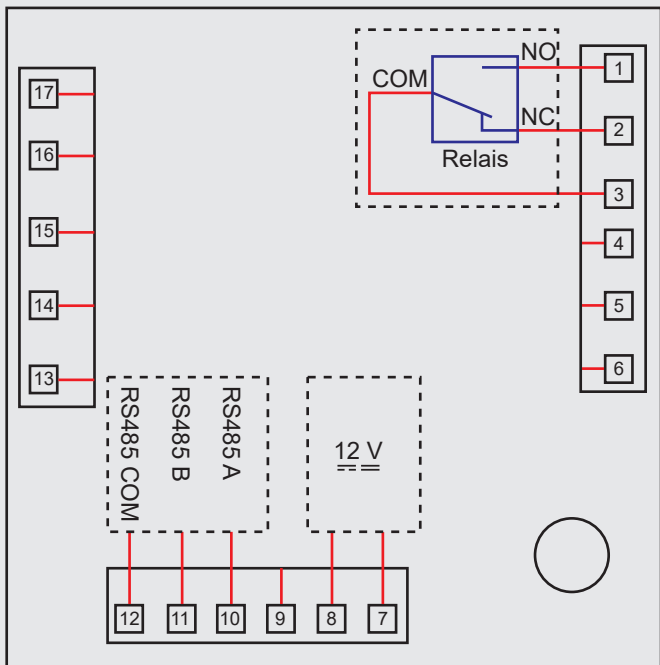



8

